

Ultra-stable, high precision (ppm class) fluxgate technology DS Series current transducer for non-intrusive, isolated DC and AC current measurement up to 1000A



Features

- Linearity error maximum 1 ppm
- Fluxgate, closed loop compensated technology with fixed excitation frequency and second harmonic zero flux detection for best in class accuracy and stability
- 100 turns calibration winding available in DSUB 9 connector - For up to ±50A test (apply ±500mA to calibration winding).
- Green diode for normal operation indication
- Full aluminum body for superior EMI shielding and extended operating temperature range
- Large aperture $\phi 27.6\text{mm}$ for cables and bus bars

Applications:

- MPS for particles accelerators
- Gradient amplifiers for MRI devices
- Stable power supplies
- Precision drives
- Batteries testing and evaluation systems
- Power measurement and power analysis
- Current calibration purposes

Specification highlights	Symbol	Unit	Min	Typ	Max
Nominal primary AC current	$I_{PN AC}$	Arms			600
Nominal primary DC current	$I_{PN DC}$	A	-900		900
Measuring range	\hat{I}_{PM}	A	-1000		1000
Primary / secondary ratio	$n1 : n2$		1:1500		1:1500
Linearity error	ϵ_L	ppm	-1		1
Offset current (including earth field)	I_{OE}	ppm	-10		10
DC-10Hz Overall accuracy @25°C (= $\epsilon_L + I_{OE}$)	acc ϵ	ppm	-11		11
AC Maximum gain error 10Hz to 5kHz	ϵ_G	%			±0.01
Operating temperature range	T_a	°C	-40		85
Power supply voltages	U_c	V	±14.25		±15.75


All ppm (or %) values refer to nominal current

Electrical specifications at Ta=23°C, supply voltage = ± 15V unless otherwise stated

Parameter	Symbol	Unit	Min	Typ.	Max	Comment	
Nominal primary AC current	$I_{PN AC}$	Arms			600	Refer to fig. 1 & 2 for derating	
Nominal primary DC current	$I_{PN DC}$	A	-900		900	Refer to fig. 1 for derating	
Measuring range	I_{PM}	A	-1000		1000	Refer to fig. 1 & 2 for derating	
Overload capacity	\hat{I}_{OL}	A			4500	Non-measured, 100ms	
Nominal secondary current	I_{SN}	mA	-600		600	At nominal primary DC current	
Primary / secondary ratio			1:1500		1:1500		
Measuring resistance	R_M	Ω	0		3	Refer to fig. 1 for details	
Linearity error	ε_L	ppm μA	-1 -0.6		1 0.6	ppm refers to nominal current μA refers to secondary current	
Offset current (including earth field)	I_{OE}	ppm μA	-12 -7.2		12 7.2	ppm refers to nominal current μA refers to secondary current	
DC-10Hz Overall accuracy @25°C (= $\varepsilon_L + I_{OE}$)	acc ε	ppm	-13		13	ppm refers to nominal DC current	
Offset temperature coefficient	TC_{IOE}	ppm/K $\mu A/K$	-0.1 -0.06		0.1 0.06	ppm refers to nominal current μA refers to secondary current	
Bandwidth	f(-3dB)	kHz	500			Small signal, graphs figure 3	
Amplitude error	ε_G	%			10Hz - 2kHz	0.01%	% refers to nominal current
					2kHz - 10kHz	0.20%	
					10kHz - 100kHz	2.50%	
Phase shift	θ	°			10Hz - 2kHz	0.03°	
					2kHz - 10kHz	0.04°	
					10kHz - 100kHz	1.0°	
Response time to a step current I_{PN}	$t_r @ 90\%$	μs		1		$di/dt = 100A/\mu s$	
Noise	noise	ppm rms			0 - 100Hz	0.01	Measured on secondary current
					0 - 1kHz	0.02	
					0 - 10kHz	0.20	
					0 - 100kHz	0.70	
Fluxgate excitation frequency	f_{Exc}	kHz		31.25			
Induced rms voltage on primary conductor		μV rms			5		
Power supply voltages	U_c	V	±14.25		±15.75		
Positive current consumption	I_{ps}	mA	94	100	105	Add I_s (if I_s is positive)	
Negative current consumption	I_{ns}	mA	87	92	98	Add I_s (if I_s is negative)	
Operating temperature range	T_a	°C	-40		85		
Stability							
Offset stability over time		ppm/month $\mu A/month$	-0.1 -0.06		0.1 0.06	ppm refers to nominal current μA refers to secondary current	
Offset change with vertical external magnetic field		$\mu A / mT$		0.2	0.8	(perpendicular to bus bar) μA refers to secondary current	
Offset change with horizontal external magnetic field		$\mu A / mT$		0.8	2	(parallel to bus bar) μA refers to secondary current	
Offset change with power supply voltage changes		$\mu A / V$		0.004	0.04	μA refers to secondary current	
Offset change with absolute power supply voltages tracking		$\mu A / V$		0.012	0.04	μA refers to secondary current	


Measurement resistor R_M and ambient temperature derating (Fig. 1)

Maximum measurement resistor vs. ambient temperatures

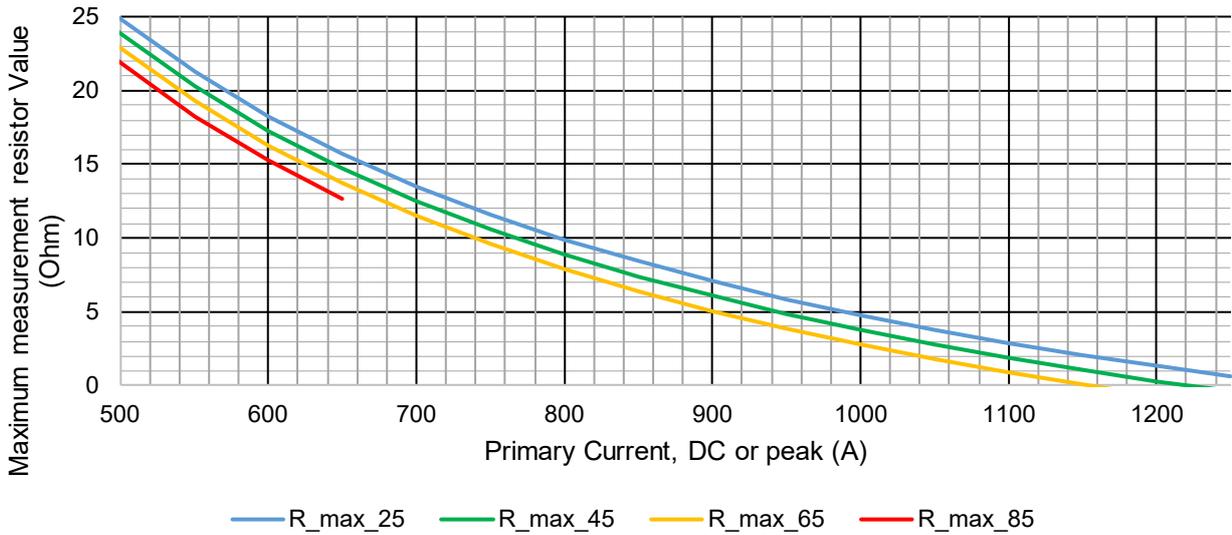


Frequency and ambient temperature derating (Fig. 2)

Maximum primary current A_{rms}

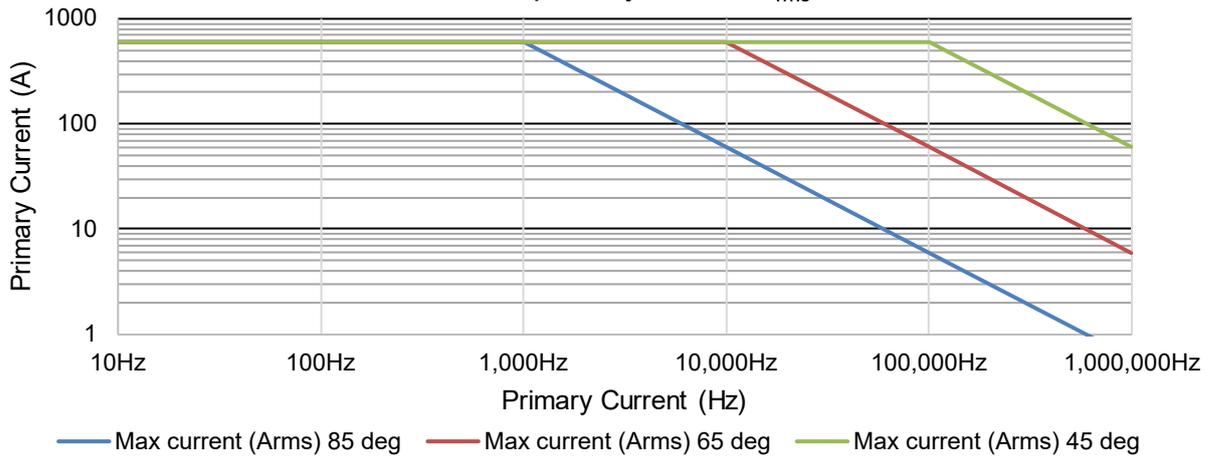

Frequency characteristics (Fig. 3)

Amplitude / Phase

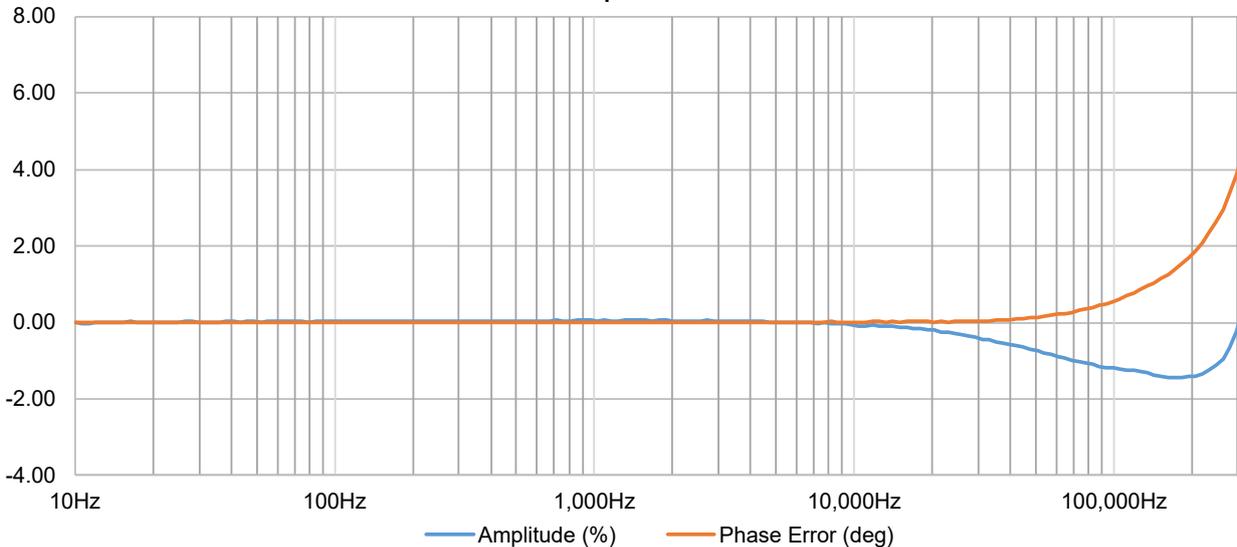

Isolation specifications

Parameter	Unit	Value
Clearance	mm	9.5
Creepage distance	mm	10.5
Comparative tracking index (CTI)		> 600
Rms voltage for AC isolation test, 50/60 Hz, 1 min - Between primary and (secondary and shield) - Between secondary and shield	kV	5.7
Impulse withstand voltage (1.2/50µs)	kV	10.4
Continuous working voltage with Uninsulated wire <ul style="list-style-type: none"> • Non mains • CAT II (DC and rms) • CAT III (DC and rms) Insulated wire <ul style="list-style-type: none"> • Non mains • CAT II (DC and rms) • CAT III (DC and rms) 	V	1000 600 300 2000 1000 1000
Transient voltage with Uninsulated wire <ul style="list-style-type: none"> • Non mains • CAT II • CAT III Insulated wire <ul style="list-style-type: none"> • Non mains • CAT II • CAT III 	V	4500 6000 6000 6000 6000 8000



Caution: Do not connect the transducer to signals or use for measurements within Measurement Category IV, or for measurements on MAINS circuits or on circuits derived from Overvoltage Category IV which may have transient overvoltages above what the product can withstand. The product must not be connected to circuits that have a maximum voltage above the continuous working voltage, relative to earth or to other channels, or this could damage and defeat the insulation. The product can only withstand transients up to the transient overvoltage rating without breakdown or damage to the insulation. An analysis of the working voltages, loop impedances, temporary overvoltages, and transient overvoltages in the system must be conducted prior to making measurements.



Caution: When using insulated wires all wiring must be insulated for the highest voltage used.

Absolute maximum ratings

Parameter	Unit	Max	Comment
Primary	kA	4.5	Maximum 100ms
Power supply	V	±16.5	
Maximum calibration current	mA	500	
Calibration winding resistance	Ω	15	

Environmental, safety and mechanical specifications

Parameter	Unit	Min	Typ	Max	Comment
Altitude	m			2000	
Usage					Designed for indoor use
Transient voltages					Up to overvoltage category III
Poution Degree				2	
Ambient operating temperature range	°C	-40		85	
Storage temperature range	°C	-40		85	
Relative humidity	%	20		80	Non-condensing
Mass	kg		0.6		
Connections	DSUB9 male				
Standards	IEC61010-2-30 IEC61326-1 EMC IEC61010-1:2010 3rd Edition				
External devices	External devices connected to current transducers must comply with the standards IEC61010-1, IEC60950 or IEC62368-1 and be energy-limited circuitry				
Cleaning	The transducer should only be cleaned with a damp cloth. No detergent or chemicals should be used.				
Temperature	When multiple primary turns are used or high primary currents are applied the temperature around the transducer will increase, please monitor to ensure that the maximum ratings are not exceeded. It is recommended to have minimum 1mm ² per ampere in the primary busbar.				

Advanced Sensor Protection Circuits “ASPC”

Developed to protect the current transducer from typical fault conditions:

- Unit is un-powered and secondary circuit is open or closed
- Unit is powered and secondary circuit is open or interrupted

Both DC and AC primary current up to 100% of nominal value can be applied to the current transducers in the above situations without damage to the electronics.

Please notice that the transducer core can be magnetized in all above cases, leading to a small change in output offset current (less than 10ppm)

Status pins


When transducer is operating in normal condition, the status pins (3 and 8) are shorted.

- Status pins properties:
- forward direction pin 8 to pin 3, maximum forward current 10mA
 - maximum forward voltage 60V, maximum reverse voltage 5V

Accessories

- 4-channel power supplies unit for connection up to 4 x DL2000 : DSSIU-4-1U
- 6-channel power supplies for connection of up to 6 x DL2000: DSSIU-6-1U
- Transducer cables in 4 lengths (2m - 5m - 10m –15m - 20m): DSUB2 - DSUB5 - DSUB10 - DSUB15 - DSUB20


Please visit the Danisense homepage for relevant datasheets.

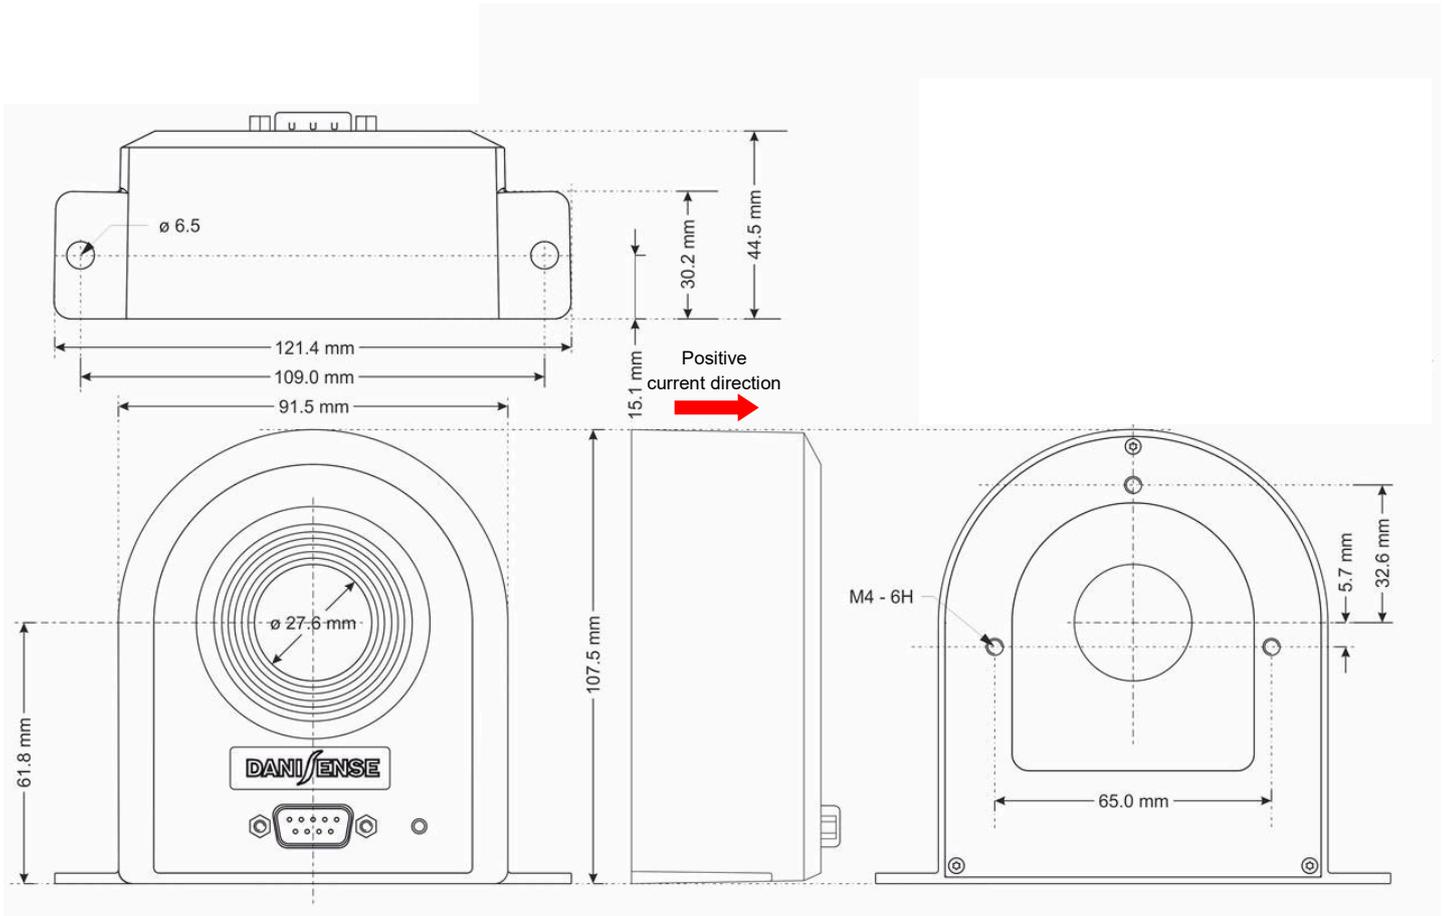

(general tolerance 0.3mm unless otherwise stated)


DSUB pin layout

 DSUB-9 current output with 100 turns calibration winding



When sensor is operating in normal condition the status pins are shorted.

 - Status pin properties.
- Forward direction pin 8 to pin 3
 - Maximum forward current 10mA
 - Maximum forward voltage 60V
 - Maximum reverse voltage 5V



- 5 —●— -Vc
- 9 —●— +Vc
- 4 —●— 0V
- 8 —●— Status
- 3 —●— Status
- 7 —●— Calib +
- 2 —●— Calib -
- 6 —●— Out+
- 1 —●— Out-

Positive current direction

Is identified by an arrow on the transducer body

Mounting instructions

- Base plate mounting 2 holes Ø6.5
2 x M5 steel screws / 6N.m
- Back side panel mounting 3 holes Ø4.0 x 6H
3 x M4 steel screw / 4N.m

Intended use:

The DS600UB-10V is designed to measure current up to 600A, and be powered by a DSSIU-4-1U or DSSIU-6-1U.

Instruction for use:

1. Do not power up the device before all cables are connected.
2. Only use cables supplied by Danisense
3. Place the primary conductor through the aperture of the transducer
4. If the DSSIU-4(6)-1U is intended for desk use, mount the rubber feet which are part of the package.
5. If the DSSIU-4(6)-1U is intended for Rack mounting, use the screw kit for mounting and do not mount the rubber feet.
6. Connect a DSUB cable between DSSIU-4(6)-1U and each sensor
7. Connect a Voltmeter, DMM or other sort of analyzer with a voltage input to the transducer BNC connector.
8. Ensure that no calibration connectors are attached when measuring primary current. Always avoid to create a calibration short circuit, between + and — calibration connection.
9. There is a risk of electrical shock if an uninsulated busbar with high voltages is touching the metal enclosure of the transducer. Please ensure before powering up the system that no primary busbar can touch the metal enclosure.
10. When all connection are secured - connect mains power
11. Apply primary current

Safety Instructions:

DO NOT TRY TO DISASSEMBLE THE UNIT.

If the green transducer diode is not operating when the system is powered up, disconnect power and contact Danisense for further instruction.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Declaration of Conformity

Danisense A/S
Malervej 10
DK-2630 Taastrup
Denmark

Declares that under our sole responsibility that this product is in conformity with the provisions of the following EC Directives, including all amendments, and with national legislation implementing these directives:

Directive 2014/30/EU

Directive 2014/35/EU

And that the following harmonized standards have been applied

EN 61010-1 (Third Edition):2010, EN 61010-1:2010/A1:2019

EN 61010-2-030:2021/A11:2021

EN 61326-1:2013

All DANISENSE products are manufactured in accordance with RoHS directive 2011/65/EU. Annex II of the RoHS directive was amended by directive 2015/863 in force since 2015, expanding the list of 6 restricted substances (Lead, Hexavalent Chromium, PBB, PBDE and Cadmium)

Danisense follows the provision in EN 63000:2018

Place

Taastrup, Denmark



Henrik Elbæk

Date

2022-03-15